


## THE TIVO REMOTE CONTROL.

- 1 The TIVO BUTTON takes you to the Home screen.
- 2 If programmed, TV PWR turns your TV on or off. Go to 'Menu' > 'Settings' > 'Remote, CableCARD, & Devices' > 'Remote Control Setup' to program.
- 3 If programmed, use INPUT to select the input for your TV.
- 4 BACK goes back to the previous screen.
- 5 Use the ARROW BUTTONS to navigate the TiVo menus. In live TV, press UP for the one-line guide, DOWN to see personalized predictions, LEFT for your favorite channels, and RIGHT to see what's on other tuners.
- 6 If programmed, VOLUME and MUTE control the volume on your TV or AV receiver.
- 7 Press and hold the VOICE button to issue voice commands.
- 8 REPLAY repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show. When browsing, press to jump to the first item in a strip.
- 9 Use the THUMBS UP and THUMBS DOWN buttons to rate shows to influence which shows get recorded as TiVo Suggestions.
- 10 The A, B, C buttons set options and sort and filter views, and to turn accessibility features on or off. Press and hold A for the screen reader, B for closed captioning, or C for video description.
- 11 CLEAR dismisses items appearing over live TV and deletes titles from My Shows and the To Do List.



- 12 LIVE TV takes you to live TV and lets you cycle through tuners.
- 13 INFO shows the info card while watching a show; press this button again to make it disappear.
- 14 Press OK to choose menu items.
- 15 Use EXIT to close certain apps.
- 16 Use CHANNEL UP/DOWN to change the channel or move quickly through lists and the guide.
- 17 GUIDE takes you to the on-screen program guide.
- 18 Press RECORD to record the show you're watching, or to set up a recording for a show selected in the guide.
- 19 While watching shows, use these buttons to control playback. Press up to three times for three speeds. In the TiVo menus, use REWIND and FAST-FORWARD to move quickly through strips. Press PLAY and then OK to start/stop QuickMode™.
- 20 ADVANCE moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press to jump to the next tick mark when fast-forwarding or rewinding. Use to enter a dash when tuning to OTA sub-channels.
- 21 Press ON DEMAND to go directly to the video on demand library.
- 22 Press the NETFLIX button to launch the Netflix app.
- 23 ENTER/LAST returns to the last channel viewed.

\* To program your TiVo remote, press the TiVo button to go to the Home screen and select the Menu icon . Then choose 'Settings' > 'Remote, CableCARD, & Devices' > 'Remote Control Setup.' Follow the easy on-screen instructions.

To toggle closed captioning on/off press the letter "B" [10] or press "i" (Information) [13] and then press "OK" [14] to toggle on/off.

When watching 901, the Lauderdale West Community Channel, press "pause" to allow more time to read a slide. Press "PLAY" to continue. You can use "FAST-FOWARD" [19] to catch up after a pause.